

INSTALLATION INSTRUCTIONS

Model 5017XL-BK

FOR YOUR SAFETY WARNING: BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF; EITHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS SHUT OFF. GENERAL You don't need special tools to install this fixture. Be sure to follow the steps in the order given. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system. Read instructions carefully. If you are unclear as to how to proceed, consult a qualified electrician.

NOTE: Proper wiring is essential for the safe operation of this fixture.

HANGING THE FIXTURE (Fig. 1)

1. Shut off the power at the circuit breaker and remove the old fixture, including the mounting hardware.
2. Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
3. Attach the mounting plate (D) to the outlet box (A) (not supplied) with mounting screws (C), and mounting surface with the wood screws(G)& the wall anchor(F) tightly. GND must face out.
4. Hang the fixture (I) on the mounting plate(D) with the safety cable hook (E). (Note: This allow for fixture to be supported while wire connection!)
5. Separate the cage (L) by loosening screws (K).

DO NOT EXCEED THE MAXIMUM WATTAGE RATING!

Your installation is now complete. Return power to the junction box and test the fixture.

CONNECTING THE WIRES (Fig. 2).

6. Connect the electrical wires as shown in Fig.2. Making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the circular strap using the green screw provided.

COMPLETING THE INSTALLATION (Fig.1)

7. Align the fixture back plate (H) to mounting plate (D) and secure by mounting screws (B).
8. Install the bulb (E12 Candelabra base, not included.) in accordance with the fixture's specification.
9. Secure the cage (L) back to the fixture (I) with screws (K).
10. To prevent moisture from entering the outlet box and causing a short, use clear caulking (i.e. Indoor/Outdoor Silicone Sealant) to outline the outside of fixture back plate where it meets the wall leaving a space at bottom to allow moisture a means to escape. (Fig. 3)

Fig.1

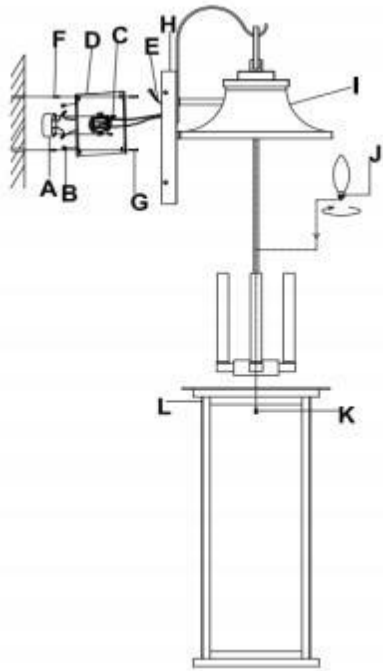


Fig. 2


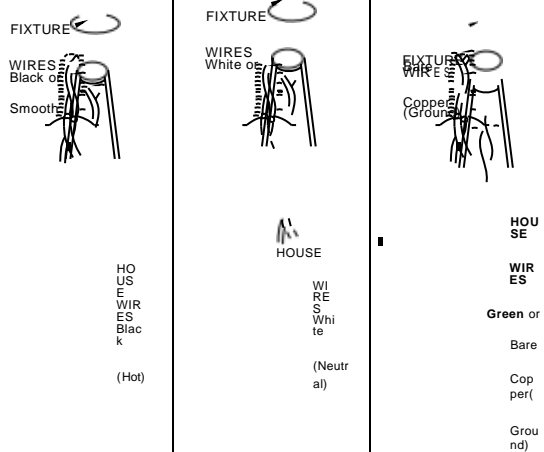


Fig. 3

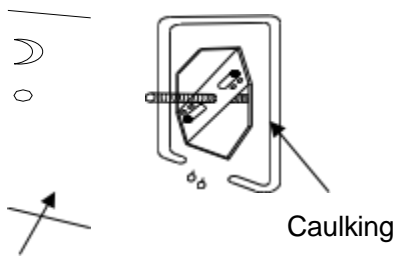

Backplate

Z-Lite
Est. 1987