
ASSEMBLY AND INSTALLATION INSTRUCTIONS

Item NO:545CHM/545CHB/546CHM/546CHB

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

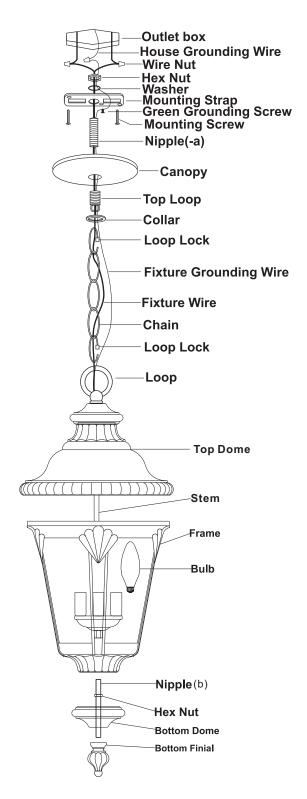

- 1. Attach nipple(-a) to the mounting strap, then secure it with a washer and hex nut.
- 2. Attach the mounting strap to the outlet box by using two mounting screws.
- 3. Secure the loop to stem of the fixture.
- 4. Choose the length of the chain you need, then weave the fixture wire and the fixture grounding wire through the chain links. Then connect one end of the chain with the loop by using the loop lock.
- 5. Secure the top loop to nipple(-a).
- 6. Thread the fixture wire and fixture grounding wire through the collar, canopy, top loop, nipple(-a) and mounting strap.
- 7. Connect the other end of the chain with the top loop by using the loop lock.
- 8. Pull out the outlet wires and house grounding wire from the outlet box. Make wire connections using the wire nuts:
 - ---The smooth wire (marked) from the fixture to the black wire from the power source.
 - ---The ridged wire (unmarked) from the fixture to the white wire from the power source.
 - ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with a wire nut.

Carefully tuck the wires back into the outlet box.

- 9. Attach the canopy to the mounting strap by inserting the top loop, then secure it with the collar.
 - CAUTION: With silicone caulking compound, caulk completely around where back of canopy meets with the wall surface to prevent water from seeping into the outlet box.
- 10. Screw the bottom finial and take the frame out
- 11. Attach the candle tubes to the sockets, then install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
- 12. Attach the frame and the bottom dome upward to the top dome by inserting the socket and nipple(-b), then secure them with a hex nut and the finial.
- 13. Turn on the power at the main fuse or circuit breaker box.