
INSTALLATION INSTRUCTION FOR WALL LAMP

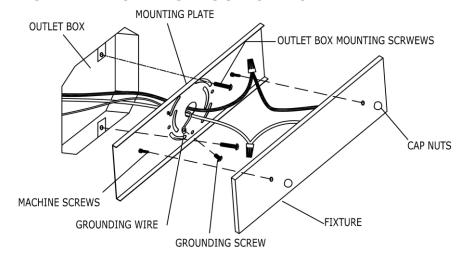

CAUTION: DISCONNECT POWER DURING INSTALLATION

- 1.) IF YOU ARE REPLACING AN EXISTING FIXTURE, DISCONNECT AND REMOVE THE OLD FIXTURE, EXPOSE THE SUPPLY WIRING FROM THE OUTLET BOX.
- 2.) THREAD THE MACHINE SCREWS INTO THE OPPOSITE SIDE OF THE MOUNTING PLATE FROM THE GREEN GROUND SCREW. LOCK THE MACHINE SCREWS INTO PLACE WITH LOCK NUTS.
- 3.) FASTEN THE MOUNTING PLATE TO THE OUTLET BOX USING THE TWO SCREWS SUPPLIED WITH THE OUTLET BOX.
- 4.) STREAD THE ELECTRICAL WIRES SO THAT THE BLACK WIRES ARE ON ONE SIDE OF THE OUTLET BOX AND THE WHITE WIRES ARE ON THE OTHER SIDE.
- 5.) GROUNDING INSTRUCTIONS.
- A) ON FIXTURES WHERE MOUNTING PLATE IS PROVIDED WITH A GREEN SCREW AND TWO REISED DIMPLES. WRAP GROUND WIRE FROM OUTLET BOX MOUND GREEN GROUND SCREW AND TIGHTEN.

B) ON FIXTURES WHERE MOUNTING PLATE IS PROVIDED WITH A GREEN GROUND WIRE ATTACHED. CONNECT MOUNTING PLATE GROUND WIRE TO GROUND WIRE CONNECTOR (NOT PROVIDED.)

IF FIXTURE IS PROVIDED WITH GROUND WIRE. CONNECT FIXTURE GROUND WIRE TO GROUND WIRE. FROM OUTLET BOX WITH CONNECTOR (NOT PROVIDED), AFTER FOLLOWING THE ABOVE STEPS. NEVER CONNECT GROUND WIRE TO BLACK OR WHITE POWER SUPPLY WIRES.

- 6.) TO MAKE ELECTRICAL CONNECTIONS:
 CONNECT THE WHITE WIRE(S) FROM THE
 FIXTURE TO THE WHITE WIRE OF THE
 OUTLET BOX. CONNECT THE BLACK
 WIRE(S) FROM THE FIXTURE TO THE
 BLACK WIRE OF THE OUTLET BOX. NOTE:
 BLACK OUTLET BOX WIRE MAYBE RED,
 ROUND & SMOOTH AND / OR HAVE
 COPPER CONDUCTOR. WHITE OUTLET
 BOX WIRE MAYBE SQUARE & RIDGED
 AND / OR HAVE A SILVER CONDUCTOR.
- 7.) PLACE FIXTURE AGAINST MOUNTING SURFACE ALLOWING THE MACHINE SCREWS TO PASS THROUGH THE FIXTURE COVER PLATE. SECURE WITH CAP NUTS.

INSTALLATION

- 1. REMOVE SOCKET RING FROM SOCKET.
- 2. POSITION GLASS ON LAMP AND SECURE WITH SOCKET RING.

7000-3V / 7000-4V / 7000-5V

