


ITEM NO.: Z16-58FL

ASSEMBLY INSTRUCTIONS:

*VERY IMPORTANT

PLEASE READ THOROUGHLY. MAKE SURE YOU PROPERLY ALIGN POLES BEFORE SCREWING THEM TOGETHER TO AVOID DAMAGING CONNECTION THREADS. NOT ADHERING TO THIS PROCEDURE MAY VOID YOUR WARRANTY.

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A FLAT SURFACE AND LINE THEM UP AS PER THE SKETCH
2. SCREW TUBE (B) INTO BASE (A), TUBE (C) INTO TUBE (B), AND SOCKET SECTION (D) INTO TUBE (C).
3. THEN FASTEN WASHER (K), WITH WING NUT (J).
4. SCREW STEM (E) INTO SOCKET SECTION (D).
5. PLACE WASHER (F), SHADE (G) AND WASHER (L) ONTO STEM (E), AND SECURE WITH FINIAL (I) ADJUST SHADE.
6. INSTALL BULB (H) INTO SOCKET SECTION (D).
7. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

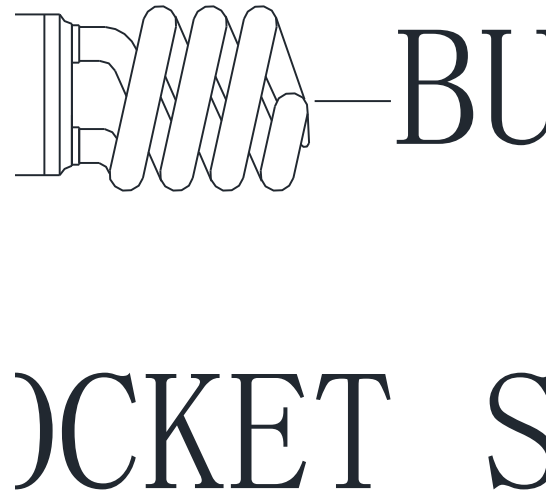

USE 3PCS 100W (MAXIMUM) INCANDESCENT A TYPE BULB.

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

ATTENTION

POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT

✘ **PLEASE INFORM YOUR DEALER IMMEDIATELY IN CASE OF ANY PARTS SHORTAGE.**

✘ **SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**