## INSTALLATION INSTRUCTIONS Model 5018PHBR-BK

FOR YOUR SAFETY WARNING: BE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF; EITHER THE FUSE IS REMOVED OR THE CIRCUIT BREAKER IS SHUT OFF. GENERAL You don't need special tools to install this fixture. Be sure to follow the steps in the order given. Under no circumstances should a fixture be hung on house electrical wires, nor should a swag type fixture be installed on a ceiling which contains a radiant type heating system. Read instructions carefully. If you are unclear as to how to proceed, consult a qualified electrician.

## NOTE: Proper wiring is essential for the safe operation of this fixture. HANGING THE FIXTURE (Fig. 1)


- 1. Shut off the power at the circuit breaker and remove the old fixture including the mounting hardware.
- Carefully unpack your new fixture and lay out all the parts on a clear area. Take care not to lose any small parts necessary for installation.
- 3. Take off the cage (H) from the bottom plate (D) by loosening mounting screws (C).


## **CONNECTINE THE WIRES (Fig.2)**

- 4. While supporting the fixture, connect the electrical wires as shown in figure 2. If your post has a ground wire (green or bare copper), connect the fixture ground wire to it. If not, consult your electrician for proper grounding. After the wires are connected, tuck them carefully inside the post (A).
- 5. Place the fixture onto pole, and secure with the 3 mounting screws (B)

## **COMPLETING THE INSTALLATION (Fig. 1)**

- 6. Insert caps (F) on the candle covers (E).
- 7. Install the bulb (E12 Candelabra base, not included.) in accordance with the fixture's specification.
- 8. Attach the cage (H) back to the bottom plate (D) by mounting screws (C).

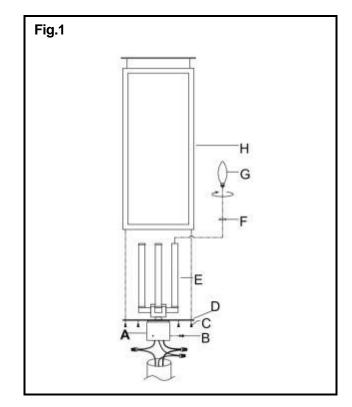

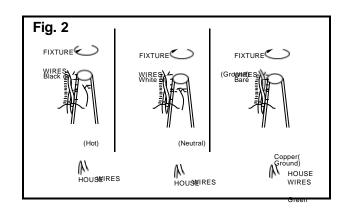

fitter Please observe local building/electrical codes regarding the installation of your post fixture.Please keep in mind your FIG.2C geographic location and the depth that Top column (thread top column onto the ground freezes to, when deciding middle column) the depth of your installation. MiddleColumn FIG.2B Machine Screws(3) (3 machine screws secure Middle Column to post base) Post Base FIG.2A Cap Nuts (3) Base Mounting Bracket Anchor Bolts (set in and aligned with top of concrete) 1-1/2" (38mm) **CEMENT BASE** 18" X 18" Nut (46 X 46cm) (6)Mounting FIG.2 Bracket

Anchor Bolt (3)

FIG.1

**564P-BK/ORB**